



INDEX

Symbols

A

- address-family ipv4 command
 - for BFD 62, 63
- ais-shut command 386
- aps group command 93, 385
- aps submode
 - channel command 93, 94, 385
 - interface loopback command 385
 - See aps group command
- area command (BFD) 60
- atm address-registration command 42
- atm ilmi-config disable command 44
- atm ilmi-keepalive command
 - on ATM interfaces 42
- ATM interface
 - ATM overview 2
 - attaching a vc-class 38, 39, 41
 - bringing up 6, 45
 - configuring a PVC 13
 - configuring a vc-class 34, 48
 - configuring a vp-tunnel 16, 19
 - configuring an IP address and subnet mask 20
 - configuring OAM AIS/RDI 35
 - configuring OAM F5 loopback 35
 - configuring OAM management 35
 - configuring optional parameters 45
 - configuring traffic shaping 18, 36
 - creating a PVC 12, 20, 26, 30, 290, 366
 - creating a subinterface 12, 23, 24, 26, 30, 289, 366
 - creating a vp-tunnel 17
 - creating an interface 12, 23, 24, 26, 30, 289, 366
 - creating subinterfaces with PVCs 11
 - disable the passing of OAM packets 17
 - displaying vp-tunnel information 19, 21
 - enabling address registration and callback functions 42

F4 OAM

- overview 4

ILMI

- disabling 43, 44
- enabling 41, 42
- overview 4
- optional parameters
 - configuring 8
- prerequisites 2
- VC class-mapping
 - overview 3
- verifying connectivity 21
- verifying ILMI configuration 43, 45
- vp-tunnel
 - configuring 47
- vp-tunnels
 - overview 4

B

- bert pattern command 443, 445

BFD

- BFD configuration mode 64, 65
- configuring fast-detection 60
- counters
 - clearing 66
 - displaying 66
- disabling echo mode 64, 66
- echo mode
 - disable 63, 64
- enabling between a local device and a peer 59
- enabling fast-detection 62, 63
- enabling on a neighbor 57
- enabling on a static route 61
- enabling on an interface 59
- examples 68
- in BGP configuration mode 58
- in OSPF configuration mode 60
- on VLAN bundles 56
- overview 55
- packet formats 57

- prerequisites 54
- setting the BFD multiplier 58
- setting the minimum interval 58, 60
- setting the multiplier 60
- specifying a VPN VRF instance 62
- static routes
 - configuring 62
- bfd command 64, 65
- bfd fast-detect command 59, 60
- bfd minimum-interval command 58, 60
- bfd multiplier command 58, 60
- bundle command 323
- bundle id command 196
 - bundle-POS 199, 200, 206, 211
- Bundle-Ether command 196
- bundle-id command
 - bundle-POS 200, 204
- C
- cablelength command 421, 427, 433
- cache entries command 255
- cache permanent command 255
- cache timeout command 256
- card type
 - changing to E3 mode 423
 - changing to T3 mode 423
- channel command 93, 94, 385
- channel-group command 177, 182, 322, 437
- Channelized SONET
 - configuring 80, 84
- CHAP (Challenge Handshake Authentication Protocol), and PPP 273, 347
- CHAP authentication 301, 302, 303, 304, 307, 308, 317
- Cisco Dynamic Packet Transport (DPT) 395
- class command 407
- class map submode
 - match mpls experimental topmost command 406
 - match precedence command 406
- class-int command
 - on ATM interfaces 38
 - on ATM subinterfaces 39
- class-map command 406
- class-vc command
 - on ATM PVCs 41
- clear bfd counters packet command 67
- clear flow exporter command 259
- clear flow monitor command 259
- clock source command 176, 182, 322, 380, 387, 401, 421, 422, 427, 433, 436
- command summary
 - FPD commands (table) 152
- commit command 399
- configure command 398
- control packets 396
- controller e1 command 445
- controller mgmtmultilink command
 - Multilink controller 323
- controller sonet command
 - FRR and SONET APS 388
 - SONET APS 386
 - SONET controller 322, 380, 401
- controller t1 command 177, 182, 322, 436, 445
- controller t3 command 176, 181, 425, 427, 429, 431, 433, 442
- crc command
 - on POS interfaces 272
 - on serial interfaces 351, 356
- D
- debug chdlc slarp packet command
 - on POS interfaces 272
- default settings
 - flow control
 - Management Ethernet 231
 - mac-address (Management Ethernet) 231
 - speed (Management Ethernet) 231
- delay trigger command
 - FRR and SONET APS 389
 - on the SONET controller 380
- destination command 251
- dot1q native vlan command 468
- dot1q vlan command 466, 470
- dscp command 251
- duplex command 234
- duplex full command 139
- duplex half command 139
- E
- E1 controller
 - default configuration values 421, 422
 - setting the clock source 422

- setting the frame type 422
 - using the clock source command 422
 - using the controller e1 command 445
 - using the framing command 422, 440
 - using the national bits command 422, 440
- E3 controller
 - configuration prerequisites 420
 - configuring 424
 - configuring clear channel serial 425
 - configuring clocking 421
 - configuring the frame type 421
 - configuring the national reserved bits 421
 - E3 configuration mode 425
 - setting the cable length 421
 - setting the card type 423
 - using the cablelength command 421
 - using the clock source command 421
 - using the framing command 421
 - using the hw-module subslot cardtype command 423, 424
 - using the mode command 425
 - using the national bits command 421, 427
 - using the show controllers command 426, 428
- E3 mode
 - changing to T3 mode 423
- echo disable command 64, 66
- encap command (Frame Relay) 164, 165, 172
- encapsulation command
 - on ATM vc-classes 35
 - on POS interfaces 86, 272, 280, 325
 - on serial interfaces 351, 356
- encapsulation frame relay command 164
- end command 399
- Ethernet interface
 - configuring an attachment circuit 142
 - configuring flow control 128
 - configuring MAC accounting 128, 141
 - configuring the IP address and subnet mask 135
 - configuring the MAC address 128, 136
 - configuring the MTU 128, 136
 - default settings
 - flow control 128
 - MAC accounting 128
 - MAC address 128
 - mtu 128
 - displaying Ethernet interfaces 137
 - displaying MAC accounting statistics 142
 - enabling flow-control 136
 - enabling Layer 2 transport mode 143
 - Gigabit Ethernet standards 130
 - IEEE 802.3 Physical Ethernet Infrastructure 130
 - IEEE 802.3ab 1000BASE-T Gigabit Ethernet 130
 - IEEE 802.3ae 10 Gbps Ethernet 130
 - IEEE 802.3z 1000 Mbps Gigabit Ethernet 130
 - Layer 2 VPN
 - configuring Layer 2 protocol tunneling and data units 143
 - overview 129
 - preparing a port for Layer 2 VPN 142
 - VLAN support 464
 - using the flow-control command 128, 136
 - using the interface command 135
 - using the ipv4 address command 135
 - using the l2protocol command 143
 - using the l2transport command 143
 - using the mac address command 128, 136
 - using the mac-accounting command 128
 - using the mtu command 128, 136
 - using the negotiation auto command 136
 - using the no shutdown command 136
 - VLANs
 - 802.1Q frames tagging 463
 - assigning a VLAN AC 466
 - configuring a Layer 2 VPN attachment circuit 469
 - configuring an attachment circuit 470
 - configuring Layer 2 VPN 471
 - configuring native VLAN 467
 - configuring subinterfaces 465
 - configuring the native VLAN 468
 - displaying VLAN interfaces 467
 - displaying VLAN trunks 467
 - MTU inheritance 463
 - native VLAN description 463
 - overview 462
 - removing a subinterface 472
 - subinterface overview 463

- using the dot1q native vlan command 468
 - using the dot1q vlan command 466
 - using the interface command 468
 - using the l2protocol command 471
 - using the show vlan interfaces command 467
 - using the show VLAN trunks command 467
- Ethernet interfaces
 - using the mac accounting command 141
- exit command 406, 407
- exporter command 256
- exporter map 244
- F
- f4oam disable command
 - on ATM interfaces 17
- failover 196
- Fast Ethernet interface
 - configuring duplex operation 128, 139
 - configuring interface speed 139
 - configuring MAC accounting 128
 - configuring the IP address and subnet mask 138
 - configuring the MTU 129, 139
 - default settings
 - autonegotiation 129
 - duplex operation 128
 - interface speed 129
 - MAC accounting 128
 - mtu 129
 - enabling and disabling autonegotiation 129
 - enabling autonegotiation 139
 - negotiation auto command 129
 - removing the shutdown configuration 139
 - using the duplex command 139
 - using the interface command 138
 - using the ipv4 address command 138
 - using the mac-accounting command 128
 - using the mtu command 129, 139
 - using the negotiation auto command 139
 - using the no shutdown command 139
 - using the speed command 129, 139
- fdl 422
- fdl ansi 422
- fdl ansi command 422, 437
- field programmable devices
 - see FPD images
- field-programmable gate array
 - see FPGA
- flow command 258
- flow exporter map configuration submode 245
- flow exporter map version configuration submode 246
- flow exporter-map command 251
- flow monitor map configuration submode 246
- flow monitor-map command 250, 255
- flow-control command 128, 136
- FPD images
 - description 149
 - displaying default information 153
 - displaying minimum and current versions 153
 - overview for SPAs 150
 - troubleshooting upgrades 159–160
 - upgrading 153
 - verifying successful upgrade 154
- FPGA
 - description 149
 - devices, methods of upgrading 150
- Frame Relay
 - configuration examples 185
 - configuring PVC encapsulation 172
 - configuring support type 165
 - configuring the support type 172
 - default settings 165
- LMI
 - configuring 165, 172
 - disabling 165, 173, 174
 - enabling 165
 - overview 165
 - polling 166
 - modifying the default configuration 171
 - on POS interfaces 269
 - on PVCs 165
 - on serial interfaces 349
 - overview 164
 - prerequisites 163
- frame-relay intf-type command 165, 172
- frame-relay intf-type dce command 165
- frame-relay intf-type dte command 165
- frame-relay lmi command 165
- frame-relay lmi disable command 174
- frame-relay lmi-t391dte command 166

- frame-relay lmi-type command 165, 172
- framing command 381, 421, 422, 427, 434, 436, 440
- H
- HDLC
 - on POS interfaces 272
- hw-module node reload command 399
- hw-module port command 398, 399
- hw-module subslot cardtype command
 - for T3 and E3 controllers 423, 424
- hw-module subslot reload command 154
- I
- IEEE 802.3ad standard 194
- if submode
 - bundle id command 199, 200, 206, 211
 - bundle-id command 200, 204
 - controller sonet command 386
 - duplex command 234
 - interface command 385
 - ip address command 198, 202, 204, 210
 - ipv4 address command 178, 183, 220, 232, 324, 385, 386, 401
 - keepalive command 386
 - mtu command 232
 - no shutdown command 199, 204, 206, 211, 232, 386, 401
 - pos crc command 386
 - See* interface command
 - See* interface preconfigure command
 - show srp ips interface srp command 404
 - speed command 235
 - srp interface srp request manual-switch command 404
 - srp ips request forced-switch command 404, 409, 410
 - srp ips timer command 404
 - srp ips wtr-timer command 403
 - srp topology-timer command 401
 - tunnel destination command 456
 - tunnel source command 456
- if-pre submode
 - ipv4 address command 337
- ILMI
 - on ATM interfaces 41
- Intelligent Protection Switching (IPS) 402
- interface Bundle-Ether command 198, 202
- interface Bundle-POS command 196
- interface command 135, 468
 - ATM interface configuration mode 12, 17, 23, 24, 26, 30, 37, 39, 40, 44, 289, 366
 - ATM subinterface configuration mode 20
 - Fast Ethernet 232
 - for Ethernet interfaces 141, 470
 - for Fast Ethernet interfaces 138
 - for VLAN subinterfaces 466
 - forVLAN subinterfaces 470
 - Link Bundling 199, 206, 210
 - loopback 220
 - Management Ethernet 234, 235, 236
 - null 222
 - on ATM interfaces 42
 - on POS interfaces 277, 287, 324, 325, 326
 - POS interfaces configuration mode 86, 280
 - PPP 303, 306, 308, 309, 312, 315, 317, 318
 - serial interface configuration mode 353, 356, 364
 - SONET APS 385
 - SRP 401, 403, 408, 409, 410
 - tunnel IPSEC 456
- interface loopback command 385
- interface POS command 211
- interface preconfigure command
 - POS 337
- interface submode
 - service-policy command 408
- interfaces
 - Link Bundling 191
 - configuring 197
 - link failover 197
 - prerequisites 192
 - QoS 195
 - tunnel 452
- invert command
 - on serial interfaces 357
- ip address command
 - bundle-POS 198, 202, 204, 210
- IPS
 - forced switch 402
- ipv4 address command 135, 138, 196, 198, 202, 466

- Fast Ethernet 232
- loopback 220
 - on ATM subinterfaces 12, 20
 - on serial interfaces 353
- POS preconfigure 337
- SONET APS 385, 386
- SRP 178, 183, 324, 401
- ipv4 unreachable command 222
- K
- keepalive command 386
 - on POS interfaces 272, 287, 324
 - on serial interfaces 351, 364
- keepalive timer
 - description 273
 - monitoring SLARP packets 272
 - monitoring the POS link state 273
 - using the debug chdlc slarp packet command 272
- L
- l2protocol command 143, 471
- l2transport command 143
- L2VPN
 - See Layer 2 VPN 129
- Layer 2 VPN
 - configuring an attachment circuit 142
 - configuring Layer 2 protocol tunneling and data units 143
 - enabling Layer 2 transport mode 143
 - overview 129
 - using the l2transport command 143
- LCP (Link Control Protocol) 272, 347
- Link Aggregation Control Protocol 194
- link bundling
 - configuring VLAN bundles 463
- link failover 197
- LMI 165, 173, 174
- lmi-n391dte command 166
- lmi-n392dce command 166
- lmi-n392dte command 166
- lmi-n393dce command 166
- lmi-n393dte command 166
- lmi-t392dce command 166
- Local Management Interface (LMI) 349
- loopback
 - naming convention 217
 - loopback command 381
- M
- mac accounting command 141
- mac address command 128, 136
- mac-accounting command 128
- management ethernet interface, configuring 230
- match mpls experimental topmost command 406
- match precedence command 406
- mdl string command 434
- mdl transmit command 421, 434
- mode command 425
- Modular Quality of Service CLI (MQC)
 - configuring with SRP 405
- monitor map 244
- MS-CHAP (Microsoft version of CHAP)
 - and PPP 273
- MS-CHAP authentication 301, 302, 303, 304, 309, 318
- mtu command 128, 129, 136, 139, 232
 - on POS interfaces 87, 272, 280, 293
 - on serial interfaces 351
- multilink command 326
- multilink fragment-size command 178, 324
- multilink interleave command 326
- Multiprotocol Label Switching control processor (MPLSCP) 273, 347
- N
- naming conventions
 - loopback 217
 - null interface 217
 - preconfigure 336
- national bits command 421, 422, 427, 440
- negotiation auto command 129, 136, 139
- neighbor command (BFD) 58
- NetFlow
 - configuring 250
 - exporter map 244
 - flow exporter map configuration submode 245
 - flow exporter map version configuration submode 246
 - flow monitor map configuration submode 246
 - monitor map 244
 - overview 241, 243
 - prerequisites 242
 - restrictions 243

- sampler map 244
- sampler map configuration submode 247
- Network Control Protocols (NCPs) 273, 347
- no interface command 472
- no shutdown command 386
 - (warning) 336
 - bundle-POS 199, 204, 206, 211
 - Fast Ethernet 232
 - for Ethernet interfaces 136
 - for Fast Ethernet interfaces 139
 - SRP 401
- Nonstop forwarding 196
- null interface
 - configuring 218
 - displaying 219
 - naming convention 217
- null0 submode
 - ipv4 unreachable command 222
 - See ipv4 unreachable command
- O
- oam ais-rdi command
 - on ATM interfaces 35
- OAM management
 - on ATM interfaces 35
- oam retry command
 - on ATM interfaces 35
- oam-pvc manage command
 - on ATM interfaces 35
- options command 251
- overhead command 381
- P
- PAP (Password Authentication Protocol), and PPP 273
- PAP authentication 301, 302, 303, 304, 305, 306, 314, 315
- path command
 - FRR and SONET APS 389
 - on the SONET controller 382
- path scrambling command 386
- ping command 457
 - on ATM interfaces 21
- Point-to-Point protocol
 - See PPP 269
- police command 407
- policy map submode
 - class command 407
 - police command 407
 - policy-map command 406
 - priority command 407
 - set cos command 407
- policy-map command 406
- POS (Packet-over-SONET)
 - See POS 269
- pos crc command 386
 - on POS interfaces 87, 280
- POS interface
 - and Frame Relay Encapsulation 269
 - bringing up 276
 - configuring optional parameters 279
 - configuring PPP authentication 273
 - configuring the CRC value 87, 272, 280
 - configuring the encapsulation type 272
 - configuring the keepalive timer 272, 286, 287, 324
 - configuring the MTU 87, 272, 280, 293
 - creating subinterfaces with PVCs 282
 - default settings
 - CRC 272
 - encapsulation 272
 - keepalive 272
 - mtu 272
 - HDLC encapsulation
 - description 269
 - overview 272
 - interface configuration mode 86, 277, 280, 324, 325, 326
 - PPP encapsulation
 - description 269
 - overview 272
- POS interfaces
 - configuring interface encapsulation 86, 280, 325
- PPP
 - authentication
 - CHAP 301, 302, 303, 304, 307, 308
 - disabling CHAP 317
 - disabling MS-CHAP 318
 - disabling PAP 314, 315
 - modifying the default configuration 310, 312

- MS-CHAP 301, 302, 303, 304, 309
 - overview 300
 - PAP 301, 302, 303, 304, 305, 306
 - POS configuration example 327
 - prerequisites 300
 - serial configuration example 328
- CHAP (Challenge Handshake Authentication Protocol) 347
- displaying PPP interfaces 314
- MS-CHAP (Microsoft version of CHAP) 348
- on POS interfaces 269, 272
- on serial interfaces 346, 347
- PAP (Password Authentication Protocol) 348
- prerequisites 300
- ppp authentication command 273, 300, 303, 348
- ppp chap password command 308
- ppp chap refuse command 317
- ppp max-bad-auth command 312
- ppp max-configure command 312
- ppp max-failure command 312
- ppp max-terminate command 312
- ppp ms-chap password command 309
- ppp ms-chap refuse command 318
- ppp multilink minimum-active links command 326
- ppp pap refuse command 313, 315
- ppp pap sent-username command 305, 306, 313
- ppp timeout authentication command 313
- ppp timeout retry command 313
- preconfiguration
 - advantages 335
 - directory 333
 - naming conventions 336
 - restriction to physical interface 333
- priority command 407
- profile command 456
- PVC
 - on a vp-tunnel 19
 - on ATM interfaces 13
 - on ATM subinterfaces 11, 40
 - on POS subinterfaces 282, 284
- pvc command
 - on ATM subinterfaces 12, 20, 26, 30, 40, 290, 366
- R
- random command 253
- record ipv4 command 255
- reload spa
 - after FPD upgrade 152
- remote-as command (BFD) 58
- rings (outer and inner) 396
- router bgp command 58
- router ospf command (BFD) 60
- router static command (BFD) 62
- RP, preconfiguration directory 333
- S
- sample output 154, 155, 156, 158
- sampler map 244
- sampler map configuration submode 247
- sampler-map command 253
- scramble command
 - on serial interfaces 357
- serial interface
 - configuring interface encapsulation 356
 - configuring the CRC 356
 - configuring the IP address and subnet mask 353
 - configuring the keepalive timer 364
 - configuring the transmit delay 357
 - default settings
 - CRC 351
 - encapsulation 351
 - keepalive 351
 - mtu 351
 - enabling payload scrambling 357
 - inverting the data stream 357
 - link state 347, 348
 - PPP encapsulation 347
 - prerequisites 344
- Serial Line Address Resolution Protocol (SLARP) 272, 274, 347, 349
- service-policy command 408
- set cos command 407
- shape command
 - on ATM interfaces 18, 36
- shared port adapter
 - see SPA
- show aps command 94, 387
- show atm ilmi-status command 43, 45
- show atm vp-tunnel command 21
- show atm vp-tunnel interface atm command 19
- show bfd counters packet command 67

- show bundle Bundle-Ether command 201, 208
- show bundle Bundle-POS command 212
- show controller sonet command 383
- show controllers command 436, 439
 - for the E3 controller 426, 428
 - for the T3 controller 430, 432, 434
- show flow exporter-map command 252
- show flow monitor map command 257
- show fpd package command 152, 153, 156
- show frame-relay lmi command 166
- show hw-module fpd command 152, 154, 155
- show hw-module subslot command 154
- show interface command
 - for Ethernet interfaces 135
- show interfaces command 400
 - for Ethernet interfaces 137, 144
 - for Frame Relay interfaces 173, 174
 - serial sample output 370
 - SRP 402
- show ip route command 457
- show lacp bundle Bundle-Ether command 201
- show lacp bundle Bundle-POS command 212
- show mac accounting command 142
- show platform command 158
- show ppp interfaces command 304, 314
- show running-config command 402
- show sampler-map command 254
- show srp ips interface srp command 404
- show version command 135
- show vlan command 467
- show vlan interface command 473
- show vlan trunks command 467, 473
 - dot1q vlan 208
- Signal Fail (SF) 403
- SONET (Synchronous Optical Network)
 - and APS 383
 - and fast reroute (FFR) 388
 - description 375
- SONET APS (SONET Automatic Protection Switching) 383
- SONET controller
 - configuring 379
- sonet submode
 - ais-shut command 386
 - clock source command 380, 387, 401
 - delay trigger command 380, 389
 - framing command 381
 - loopback command 381
 - overhead command 381
 - path command 382, 389
 - path scrambling command 386
 - See* controller sonet command
- source command 251
- SPA
 - inserting new 150
 - migrating to new Cisco IOS software release 150
 - swapping 150
- SPA (shared port adapter)
 - See also* FPD images 150
- Spatial Reuse Protocol (SRP) 395
- speed command 129, 139, 437
 - management ethernet 235
- SRP
 - add node to ring 408
 - basic configuration 400
 - configuring MQC 405
 - definition 395
 - enabling on PLIM 397
- srp interface srp request manual-switch command 404
- srp ips request forced-switch command 404, 409, 410
- srp ips timer command 404
- srp ips wtr-timer command 403
- srp topology-timer command 401
- SSH (Secure Shell), not needed with IPsec 453
- SSL (Secure Socket Layer), not needed with IPsec 453
- T
- T1 controller
 - associating DS0 timeslots 177, 182, 322, 437
 - configuring the clock source 436
 - creating a T1 channel group 177, 182, 322, 437
 - default configuration values 421
 - enabling and disabling ANSI T1.403 remote performance reports 422, 437
 - generating and detecting yellow alarms 422
 - setting the clock source 422
 - setting the frame type 422

- T1 configuration mode 177, 182, 322, 436
 - using the channel-group command 177, 182, 322, 437
 - using the clock source command 422, 436
 - using the controller t1 command 177, 182, 322, 436, 445
 - using the fdl ansi command 422, 437
 - using the framing command 422, 436
 - using the show controllers command 436
 - using the speed command 437
 - using the yellow command 422, 436
- T1 interfaces
 - using the mdl transmit command 421
- T3 controller
 - configuration prerequisites 420
 - configuring 428
 - configuring clocking 421
 - configuring MDL messages 421
 - configuring the frame type 421
 - setting the cable length 421
 - setting the card type 423
 - using the bert pattern command 443, 445
 - using the cablelength command 421, 427, 433
 - using the clock source command 176, 182, 322, 421, 427, 433
 - using the controller t3 command 176, 181, 425, 427, 429, 431, 433, 442
 - using the framing command 421, 427, 434
 - using the hw-module subslot cardtype command 423, 424
 - using the mdl string command 434
 - using the mdl transmit command 421, 434
 - using the show controllers command 430, 432, 434, 439
- T3 mode
 - changing to E3 mode 423
- template command 252
- timeslots command 177, 182, 322, 437
- traffic filtering 218
- transmit-delay command
 - on serial interfaces 357
- transparent switch over 230
- transport udp command 251
- tunnel destination command 456
- tunnel source command 456
- U
- upgrade hw-module fpd command 152, 153, 158
- V
- vc-class
 - configuring 48
 - creating 48
 - on ATM interfaces 34
 - ATM interface
 - attaching a vc-class 36
 - on ATM PVCs 39
 - on ATM subinterfaces 38
- vc-class command
 - on ATM interfaces 34
- version v9 command 251
- virtual interface
 - and active/standby RPs 219, 336
 - failover 217
 - naming convention 217, 453
 - null interface definition 218
- VLANs
 - 802.1Q frames tagging 463
 - assigning a VLAN AC 466
 - configuring an IP address and subnet mask 466
 - configuring bundles 463
 - configuring native VLAN 467
 - configuring subinterfaces 465
 - configuring the native VLAN 468
 - displaying VLAN interface information 473
 - displaying VLAN interfaces 467
 - displaying VLAN trunks 467, 473
- Layer 2 VPN
 - configuring an attachment circuit 469, 470
 - configuring Layer 2 protocol tunneling and data units 471
- Layer 2 VPN support 464
- MTU inheritance 463
- native VLAN description 463
- overview 462
- removing a VLAN subinterface 472
- subinterface overview 463
- using the dot1q native vlan command 468
- using the dot1q vlan command 466, 470
- using the ipv4 address command 466
- using the l2protocol command 471
- using the no interfawn command 472

- using the show vlan interfaces command 467
 - using the show VLAN trunks command 467
- vp-tunnel
 - configuring 16
 - creating 16
 - on ATM interfaces 47
- vp-tunnel command
 - on ATM interfaces 17
- vrf command (BFD) 62
- W
- wait-to-restore (WTR) 402
- wavelength division multiplexing (WDM) 396
- Y
- yellow command 422, 436

